





# Кронштейны для КА-TW

## brackets for KA-TW

RE-KA-TW / RA-KA-TW / F-KA-TW / SDF-KA-TW

Комплект кронштейнов RE-KA-TW для рамы, внутренний

RE-KA-TW Bracket set - Frame, inwards

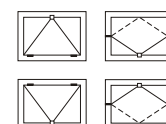
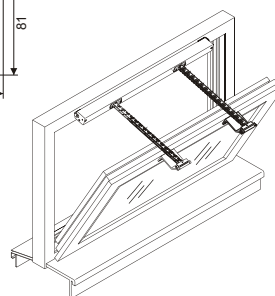
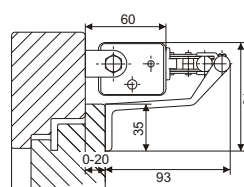
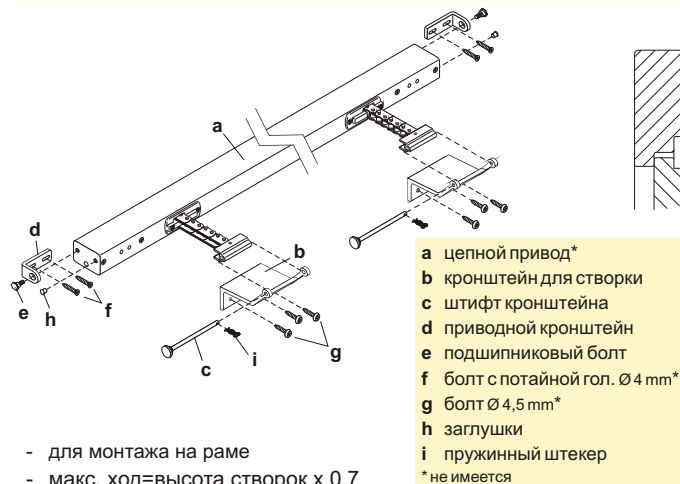


- a Chain drive\*
- b Wing bracket
- c Bracket pin
- d Drive bracket
- e Bearing screw
- f Countersunk screw Ø 4 mm\*
- g Screw Ø 4,5 mm\*
- h Covering stopper
- i Cotter pin
- \* not included

- for installing on frame  
- max. stroke = wing height x 0,7

Комплект кронштейнов RE-KA-TW для рамы, наружный

RA-KA-TW Bracket set - Frame, outwards

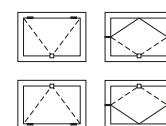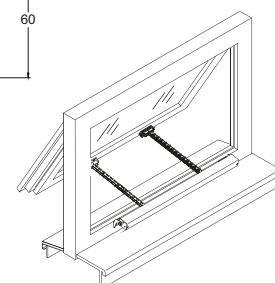
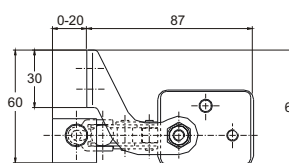
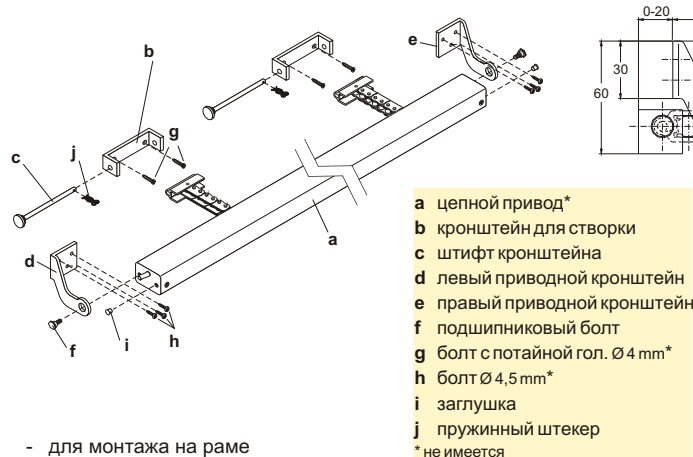


- a Chain drive\*
- b Wing bracket
- c Bracket pin
- d Left drive bracket
- e Right drive bracket
- f Bearing screw
- g Countersunk screw Ø 4 mm\*
- h Screw Ø 4,5 mm\*
- i Covering stopper
- j Cotter pin
- \* not included

- for installing on frame

Комплект кронштейнов F-KA-TW для створок

F-KA-TW Bracket Set - Window wing

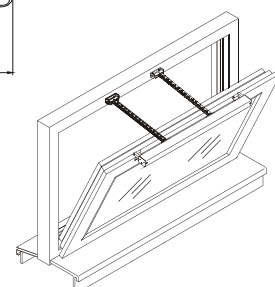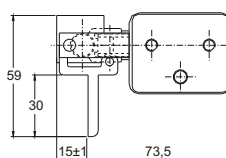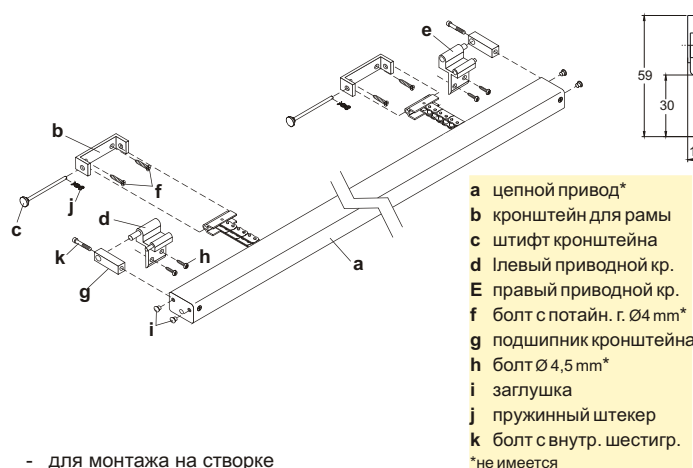

- a Chain drive\*
- b Frame bracket
- c Bracket pin
- d Left drive bracket
- e Right drive bracket
- f Bracket bearing
- g Countersunk screw Ø 4 mm\*
- h Screw Ø 4,5 mm\*
- i Covering stopper
- j Cotter pin
- k Allan screw
- \* not included

- for installing on window wing

## Комплекты кронштейнов SDF-KA-TW - SchücoRoyal D


## SDF-KA-TW Bracket Sets - Schüco Royal D

SDF 47-KA-TW  
Royal 47 D

- a цепной привод \*  
b кронштейн для створок  
c левый приводный кр.  
d правый приводный кр.  
e болт с пот. гол. M5x16 \*  
f штифт кронштейна  
g подшипниковый болт  
h болт M6x12 \*  
i заглушка  
j пружинный штекер  
\* не имеется


## SDF 47-KA-TW

- для монтажа на окнах Schüco  
типа Royal 47 D

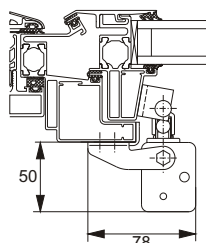


## SDF 47-KA-TW

- for installing on Schüco window  
profiles of type Royal 47 D

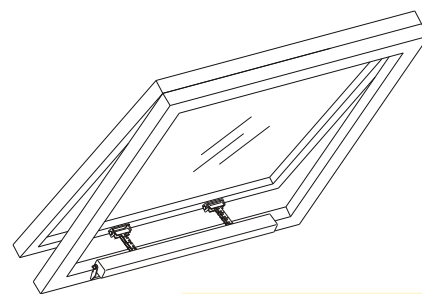


- a Chain drive \*  
b Wing bracket  
c Drive bracket left  
d Drive bracket right  
e Countersunk screw M5x16 \*  
f Bracket pin  
g Screw type bearing  
h Screw M6x12 \*  
i Covering stopper  
j Cotter pin  
\* not included

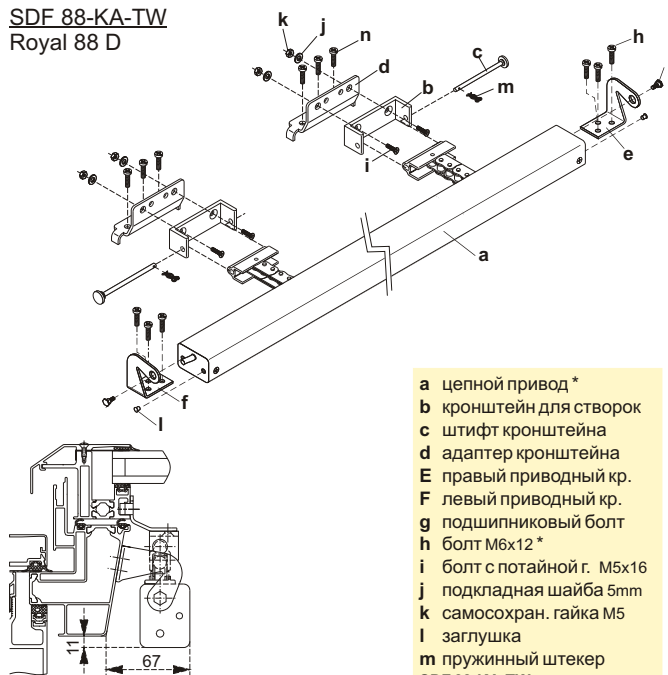SDF 88-KA-TW  
Royal 88 D

- a цепной привод \*  
b кронштейн для створок  
c штифт кронштейна  
d адаптер кронштейна  
e правый приводный кр.  
f левый приводный кр.  
g подшипниковый болт  
h болт M6x12 \*  
i болт с потайной г. M5x16  
j подкладная шайба 5mm  
k самохран. гайка M5  
l заглушка  
m пружинный штекер  
SDF 88-KA-TW  
n болт M6x16 \*  
SDF 106-KA-TW  
n болт с потайной г. M6x20  
\* не имеется

## SDF 88-KA-TW / SDF 106-KA-TW

- для монтажа на окнах Schüco  
типа Royal 88 D / Royal 106 D

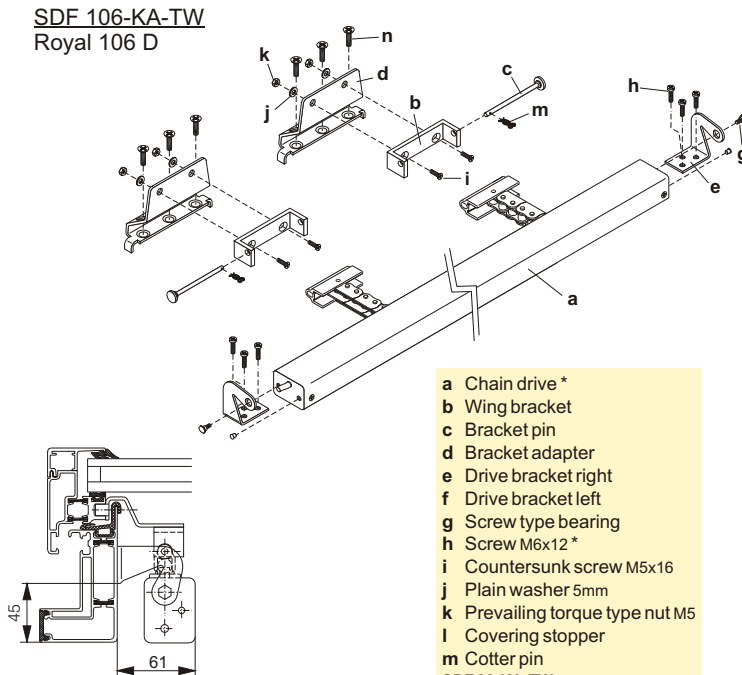SDF 106-KA-TW  
Royal 106 D

- a Chain drive \*  
b Wing bracket  
c Bracket pin  
d Bracket adapter  
e Drive bracket right  
f Drive bracket left  
g Screw type bearing  
h Screw M6x12 \*  
i Countersunk screw M5x16  
j Plain washer 5mm  
k Prevailing torque type nut M5  
l Covering stopper  
m Cotter pin  
SDF 88-KA-TW  
n Screw M6x16 \*  
SDF 106-KA-TW  
n Countersunk screw M6x20  
\* not included

## SDF 88-KA-TW / SDF 106-KA-TW

- for installing on Schüco windows  
of type Royal 47 D / Royal 106 D

Тип	№ арт.	Вес	Цвет*	Примечания
Type	Ord.-No.	Weight	Colour*	Comment
RE-KA-TW	21.050.80	0,40kg	серебр. silver	
RA-KA-TW	21.050.70	0,40kg	серебр. silver	
F-KA-TW	21.051.30	0,50kg	серебр. silver	
SDF 47-KA-TW	21.052.10	0,40kg	серебр. silver	для Schüco Royal 47 D for Schüco Royal 47 D

\* возможна лакировка во все цвета RAL  
Possibility of paint in all RAL-Colours

Права на технические изменения сохраняются.  
Rights to technical modifications reserved.

© 2008 D+H Mechatronic, Ammersbek



D + H Mechatronic AG · Georg-Sasse-Straße 28-32 · D-22949 Ammersbek/Hamburg · Germany  
Tel: +49 40 - 605 65 -0 · Fax: +49 40 - 605 65 222 · info@dh-partner.com · www.dh-partner.com